



Periodic Maintenance Service Guide for MONTERO SPORT (25MY)

The table below indicates the type of service classification that will be done on your vehicle at certain kilometer readings.

Legend: I = Inspect and check
R = Replace
L = Lubricate

 PERIODIC MAINTENANCE SERVICE (PMS) CHECKSHEET <small>Drive your Ambition</small>	Maintenance Interval								
	Perform at kilometers (miles) intervals or months interval, whichever comes first								
	Kms. (x1000)	Months	Kms. (x1000)	Months	Kms. (x1000)	Months	Kms. (x1000)	Months	
	1	1 mos.	10	6 mos.	20	12 mos.	40	24 mos.	
			30	18 mos.	60	36 mos.	80	48 mos.	
			90	54 mos.	100	60 mos.	120	72 mos.	
					140	84 mos.	160	96 mos.	
Operations inside the vehicle		Maintenance Interval							
Inspect all lights, switches & button operations	All intervals or every 6 mos.							I	I
Inspect brake pedal and clutch pedal (if applicable) for freeplay	All intervals or every 6 mos.							I	I
Inspect parking brake lever stroke and play (if applicable)	Every 20,000 kms or every 12 mos.							I	I
Clean air purifier filter (A/C cabin filter)	All intervals or every 6 mos.							C	C
Replace air purifier filter (A/C cabin filter)	Every 20,000 kms or every 12 mos.							R	R
Reset PMS reminder indicator in instrument panel	All intervals or every 6 mos.							R	R
Operations inside engine compartment		Maintenance Interval							
Inspect drive belt for cracks, fraying, wear, and adjust tension if necessary	Every 40,000 kms or every 24 mos.							I	I
Inspect intake air hose, radiator hose and turbocharger oil hose (Diesel) for damage	Every 20,000 kms or every 12 mos.							I	I
Replace Spark Plugs (if applicable)	Every 100,000 kms							R	R
Check Valve clearance except vehicles w/ auto lash	Every 100,000 kms							I	I
Inspect air cleaner element (engine air filter) for clogging and damage *Replace air cleaner element every 40,000km or every 24 mos.	All intervals							I	R
Inspect all fluid levels (Brake/clutch, Steering, Engine oil & Coolant) *Change brake & clutch fluid (if applicable) every 40,000km or every 24 mos. *Change engine coolant on the first 160,000 kms or 96 mos., there after every 100,000 kms or every 60 mos.	All intervals							I	R
Check battery status using Midtronics	All intervals							I	I
Replace Fuel filter (Diesel)	Every 20,000 kms or every 12 mos.							R	R
Replace Fuel filter (Gasoline)	Every 40,000 kms or every 24 mos.							R	R
Check & replace Radiator cap sticker	All intervals							R	R
Operations under the vehicle		Maintenance Interval							
Inspect suspension for damage and looseness (arm ball joints for play, dust cover for damage, steering linkage looseness)	Every 20,000 kms or every 12 mos.							I	I
Lubricate propeller shaft with grease fitting (if applicable)	Every 20,000 kms or every 12 mos.							L	L
Inspect brake line, transmission, transfer key, front and rear differential for oil leakage (if applicable)	All intervals							I	I
Change Manual Transmission fluid (if applicable); Include transfer key if 4x4	Every 100,000 kms or every 60 mos.							R	R
Change gear oil in Front & Rear Differential	Every 80,000 kms							R	R
Operations outside the vehicle		Maintenance Interval							
Check Wheel alignment	Every 40,000 kms or every 24 mos.							I	I
Check tire condition for pressure, presence of foreign objects, tread wear and depth	All intervals							I	I
Inspect front and rear wheel bearings for play	Every 60,000 kms or every 36 mos.							I	I
For front & rear, check Brake Pads & Shoe lining (if applicable) then conduct Tire Rotation	Every 10,000 kms or every 6 mos.							I	I
Change power steering fluid (if applicable)	Every 40,000 kms or every 24 mos.							R	R
Operations after engine is warmed up		Maintenance Interval							
Change Automatic Transmission fluid (if applicable); Include transfer key if 4x4	Every 100,000 kms							R	R
Change CVT fluid (if applicable)	Every 40,000 kms							R	R
Change Engine oil	All intervals							R	R
Change Engine oil filter	All intervals							R	R
Check Exhaust Gas Recirculation (EGR) system	Every 20,000 kms or every 12 mos.							I	I
Others		Maintenance Interval							
Perform SIQL or Small Injection Quantity Learning (if applicable)	Every 20,000 kms or every 12 mos.							I	I
Perform MPI or Multi Point Injection Learning (if applicable)	Every 40,000 kms or every 24 mos.							I	I
Check body condition for damage	Every 20,000 kms or every 12 mos.							I	I
Road Test (upon request of customer only)	Every 20,000 kms or every 12 mos.								

*Subject to change without prior notice