



Periodic Maintenance Service Guide for DESTINATOR

The table below indicates the type of service classification that will be done on your vehicle at certain kilometer readings.

Legend: I = Inspect
C = Cleaning
R = Replace
L = Lubricate



PERIODIC MAINTENANCE SERVICE (PMS) CHECKSHEET

Maintenance Interval
Perform at kilometers (miles) intervals or months interval, whichever comes first

Kms. (x1000)	Months	Kms. (x1000)	Months	Kms. (x1000)	Months	Kms. (x1000)	Months
1	1 mons.	10 30 90	6 mons. 18 mons. 54 mons.	20 60 100 140	12 mons. 36 mons. 60 mons. 84 mons.	40 80 120 160	24 mons. 48 mons. 72 mons. 96 mons.

Operations inside the vehicle	Maintenance interval				
Check all lights, switches & button operations	All intervals or every 6 months	I	I	I	I
Check brake pedal and clutch pedal (If applicable) for freeplay	All intervals or every 6 months	I	I	I	I
Clean air purifier filter (A/C cabin filter)	All intervals or every 6 months	C	C	C	C
Replace air purifier filter (A/C cabin filter)	Every 20,000 km or 1 year			R	R
Check Seat belts, buckles, retractors, anchors & adjusters	All intervals or every 6 months	I	I	I	I
Reset PMS reminder indicator in instrument panel or in MUT Laptop	All intervals or every 6 months	R	R	R	R
Operations inside engine compartment	Maintenance interval				
Check drive belt for cracks, fraying, wear, and adjust its tension if necessary	Every 40,000 km or 2 years				I
Check intake air hose, radiator hose and turbocharger oil hose(Gasoline) for damage	Every 20,000 km or 1 year			I	I
Replace Spark Plugs (If applicable)	Every 100,000 km			R	
Change engine coolant	First 160,000 km or 8 years, thereafter every 100,000 km or every 5 years				R
Check air cleaner element for clogging and damage	All intervals or every 6 months	I	I	I	I
Replace air cleaner element(Engine air filter)	Every 40,000 km or 2 years				R
Visually check all fluid levels(Brake&Clutch ,Steering,Engine oil & Coolant)	All intervals or every 6 months	I	I	I	I
Change Brake & Clutch fluid	Every 40,000 km or 2 years				R
Check battery status using Midtronics battery analyzer	All intervals or every 6 months	I	I	I	I
Replace Fuel filter (Gasoline)	Every 40,000 km or 2 years				R
Check the intake air hose, radiator hose, and turbocharger oil hose for damage	Every 20,000 km or 1 year			I	I
Check intercooler cooling water hoses for damage and proper connection	All intervals or every 6 months	I	I	I	I
Change intercooler cooling coolant	Every 400,000 km or every 20 years				R
Check engine coolant level in reservoir	Every 20,000 km or 1 year			I	I
Check & replace Radiator cap sticker	All intervals or every 6 months	R	R	R	R
Check suspension for damage and looseness (Arm ball joints for play,dust cover/boots for damage,steering linkage looseness)	Every 20,000 km or 1 year			I	I
Check Brake line, Transmission,CVT, Transfer, Front and Rear differential for oil leakage (if applicable)	All intervals or every 6 months	I	I	I	I
Check exhaust pipe connections for gas leakage, and check pipe installation	Every 20,000 km or 1 year			I	I
Operations outside the vehicle	Maintenance interval				
Check Wheel alignment	Every 40,000 km or 2 years				I
Check tire condition for pressure, presence of foreign objects, tread wear and depth	All intervals or every 6 months	I	I	I	I
Check front and rear wheel bearings for play	Every 60,000 km or 3 years			I	I
For front & rear, Check Brake Pad and shoe lining (If applicable) then conduct Tire Rotation	Every 10,000 km or 6 months		I	I	I
Check brake hoses and pipes for leakage	Every 20,000 km or 1 year			I	I
Check fuel hoses and pipes for leakage or deterioration	Every 40,000 km or 2 years				I
Operations after engine is warmed up	Maintenance interval				
Change CVT fluid	Every 40,000 km				R
Change CVT Drain Plug Gasket	Every 40,000 km				R
Change Engine Oil	All intervals or every 6 months	R	R	R	R
Change Engine Oil filter	All intervals or every 6 months	R	R	R	R
Change Engine Oil Drain Plug Gasket	All intervals or every 6 months	R	R	R	R
Others	Maintenance interval				
Perform MPI (Multi Point Injection) Learning or, if applicable	Every 40,000 km or 2 years				I
Check body condition for damage	Every 20,000 km or 1 year			I	I
Road test (Upon request of customer only)	Every 20,000 km or 1 year				

*Subject to change without prior notice