



# Periodic Maintenance Service Guide for VERSA VAN

The table below indicates the type of service classification that will be done on your vehicle at certain kilometer readings.

**Legend:** I = Inspect  
C = Cleaning  
R = Replace  
L = Lubricate



## PERIODIC MAINTENANCE SERVICE (PMS) CHECKSHEET

**Maintenance Interval**  
Perform at kilometers (miles) intervals or months interval, whichever comes first

Kms. (x1000)	Months	Kms. (x1000)	Months	Kms. (x1000)	Months	Kms. (x1000)	Months
1	1 mons.	10	6 mons.	20	12 mons.	40	24 mons.
		30	18 mons.	60	36 mons.	80	48 mons.
		90	54 mons.	100	60 mons.	120	72 mons.
				140	84 mons.	160	96 mons.

Operations inside the vehicle	Maintenance interval				
Check all lights, switches & button operations	All intervals or every 6 months	I	I	I	I
Check brake pedal and clutch pedal (If applicable) for freeplay	All intervals or every 6 months	I	I	I	I
Check parking brake lever stroke and play (If applicable)	Every 20,000 km or 1 year			I	I
Clean air purifier filter (A/C cabin filter)	All intervals or every 6 months	C	C	C	C
Replace air purifier filter (A/C cabin filter)	Every 20,000 km or 1 year			R	R
Check brake booster vacuum hoses, connections & check valve	Every 40,000 km or 2 years				I
Check Seat belts, buckles, retractors, anchors & adjusters	All intervals or every 6 months	I	I	I	I
Reset PMS reminder indicator in instrument panel or in MUT Laptop	All intervals or every 6 months	R	R	R	R
Operations inside engine compartment	Maintenance interval				
Check drive belt for cracks, fraying, wear, and adjust its tension if necessary	Every 20,000 km or 1 year			I	I
Check intake air hose, radiator hose and turbocharger oil hose(Diesel) for damage	Every 20,000 km or 1 year			I	I
Replace Spark Plugs (If applicable)	Every 100,000 km			R	
Check Valve clearance except vehicles w/ auto lash	Every 100,000 km			I	
Change engine coolant	Every 40,000 km or 2 years				R
Check air cleaner element for clogging and damage	All intervals or every 6 months	I	I	I	I
Replace air cleaner element (Engine air filter)	Every 40,000 km or 2 years				R
Visually check all fluid levels (Brake&Clutch ,Steering,Engine oil & Coolant)	All intervals or every 6 months	I	I	I	I
Change Brake & Clutch fluid	Every 40,000 km or 2 years				R
Check battery status using Midtronics battery analyzer	All intervals or every 6 months	I	I	I	I
Replace Fuel filter (Diesel)	Every 10,000 or 6 months		R	R	R
Check engine coolant level in reservoir	Every 20,000 km or 1 year			I	I
Check & replace Radiator cap sticker	All intervals or every 6 months	R	R	R	R
Operations under the vehicle	Maintenance interval				
Check suspension for damage and looseness (Arm ball joints for play,dust cover/boots for damage,steering linkage looseness)	Every 20,000 km or 1 year			I	I
Check Brake line, Transmission,CVT, Transfer, Front and Rear differential for oil leakage (if applicable)	All intervals or every 6 months	I	I	I	I
Change Manual Transmission fluid (If applicable). Include transfer if 4x4	Every 100,000 km or every 5 years			R	
Change gear oil in Front & Rear Differential (If applicable)	Every 80,000 km				R
Check exhaust pipe connections for gas leakage, and check pipe installation	Every 20,000 km or 1 year			I	I
Operations outside the vehicle	Maintenance interval				
Check Wheel alignment	Every 20,000 km or 1 year			I	I
Check tire condition for pressure, presence of foreign objects, tread wear and depth	All intervals or every 6 months	I	I	I	I
Check front and rear wheel bearings for play	Every 60,000 km or 3 years			I	I
For front & rear, Check Brake Pad and shoe lining (If applicable) then conduct Tire Rotation	Every 10,000 km or 6 months		I	I	I
Check Power steering fluid (If applicable)	Every 10,000 km or 6 months		I	I	I
Change Power steering fluid (If applicable)	Every 40,000 km or 2 years				R
Check brake hoses and pipes for leakage	Every 20,000 km or 1 year			I	I
Check fuel hoses and pipes for leakage or deterioration	Every 40,000 km or 2 years				I
Operations after engine is warmed up	Maintenance interval				
Change Engine Oil	Every 10,000 km or 6 months		R	R	R
Change Engine Oil filter	Every 10,000 km or 6 months		R	R	R
Change Engine Oil Drain Plug Gasket	Every 10,000 km or 6 months		R	R	R
Check Exhaust gas recirculation (EGR) system	Every 20,000 km or 1 year			I	
Perform SIQL (Small Injection Qty. Learning) or, If applicable	Every 20,000 km or 1 year			I	I
Others	Maintenance interval				
Lubricate locks, hinges & sliding door rollers and links	Every 10,000 km or 6 months		L	L	L
Check body condition for damage	Every 20,000 km or 1 year			I	I
Road test (Upon request of customer only)	Every 20,000 km or 1 year				

\*Subject to change without prior notice